



### Air Heat: Arctic Bear™ XHD, HD, Cub™ 200 • 400 • 700, Pureheat™, Dryvex™

#### Duct Adaptor Kits

*For use with XHD, HD, 400, & 700*

Customize your configuration of outlet air with duct adaptor kits.



2 -12": XHD/HD, outlet	PN:0169248
1-16": XHD/ HD, outlet	PN:0169246
1-20": XHD/HD, outlet	PN:0169247
3-12": Cub 400, outlet	PN:0169328
2-16": Cub 400, outlet	PN:0169329
1-20": Cub 400, outlet	PN:0169330
3-16": Cub 700, outlet	PN:0169331
2-20": Cub 700, outlet	PN:0169332

#### Heat Xchanger ducting bracket

*For use with HX200 Heat Xchanger*

Add ductwork to your HX200 Heat Xchanger with this easy to use Ducting Bracket. 2 sizes.

12" Adaptor:	PN:0169662
16" Adaptor:	PN:0169664



#### Ducting

*For use with XHD, HD, 200, 400, 700, HX200, & MC5200*

Inlet/Discharge Ducting:  
3 Heat Ratings

- Grey: High Heat (- 65° to 500° F)
- Black: Mid Heat (- 60° to 280° F)
- Yellow: Low Heat (- 20° to 200°)



Non-Insulated	
Duct, Grey: 12"ID x 25'	PN:0170337
Duct, Grey: 16"ID x 25'	PN:0170338
Duct, Grey: 20"ID x 25'	PN:0170339
Duct, Black: 12"ID x 25'	PN:0169333
Duct, Black: 16"ID x 25'	PN:0169334
Duct, Black: 20"ID x 25'	PN:0169316
Duct, Yellow: 20"ID x 25'	PN:0169317
Insulated	
Duct, Black: 12"ID x 25'	PN:0170340
Duct, Black: 16"ID x 25'	PN:0170341
Duct, Black: 20"ID x 25'	PN:0170342
Duct, Yellow: 20"ID x 25'	PN:0170343

#### B Vent Exhaust Pipe & Rain Cap

*For use with Arctic Bear Cub 200, 400, & 700*

Safe double-wall exhaust pipe

B Vent Exhaust Pipe 6" x 3'	PN: 0169336
B Vent Exhaust Pipe 8" x 3'	PN: 0169337
B Vent Exhaust Pipe 10" x 3'	PN: 0169338
B Vent Exhaust Pipe 90° Elbow 8"	PN: 0169339
B Vent Exhaust Pipe 90° Elbow 10"	PN: 0169340
Rain Cap 6"	PN: 0169341
Rain Cap 8"	PN: 0169342
Rain Cap 10"	PN: 0169343



#### Remote Thermostat

*For use with XHD, HD, 200, 400, & 700*



Control your jobsite climate remotely: Plug this Remote Thermostat into your unit and run temperature sensor to desired location. Includes 50' cord.

Remote Thermostat PN:0169324

#### Dehumidification: Dryvex™

#### Remote Humidistat

*For use with R55, & R110*

Control your jobsite climate remotely: Plug this Remote Humidistat into your unit and run humidity sensor to desired location. Includes 50' cord.

Remote Humidistat PN:0169350

